

Identifier Service SH	Service Document	
I-S-PU-01 How to activate reports in VPC Pure		Römerstr. 21 D – 71296 Heimsheim Tel.: + 49(0)7033-309878-41 service@schultheiss-gmbh.de http://www.schultheiss-gmbh.de

Apply for:

Machine Type	Version	Year
VPC66/100/Pure	All	Since release

Problem


How to activate reports in VPC Pure

Procedure


- Switch ON the machine
- Wait until the software bootup is completed



- Press  to open menu selection

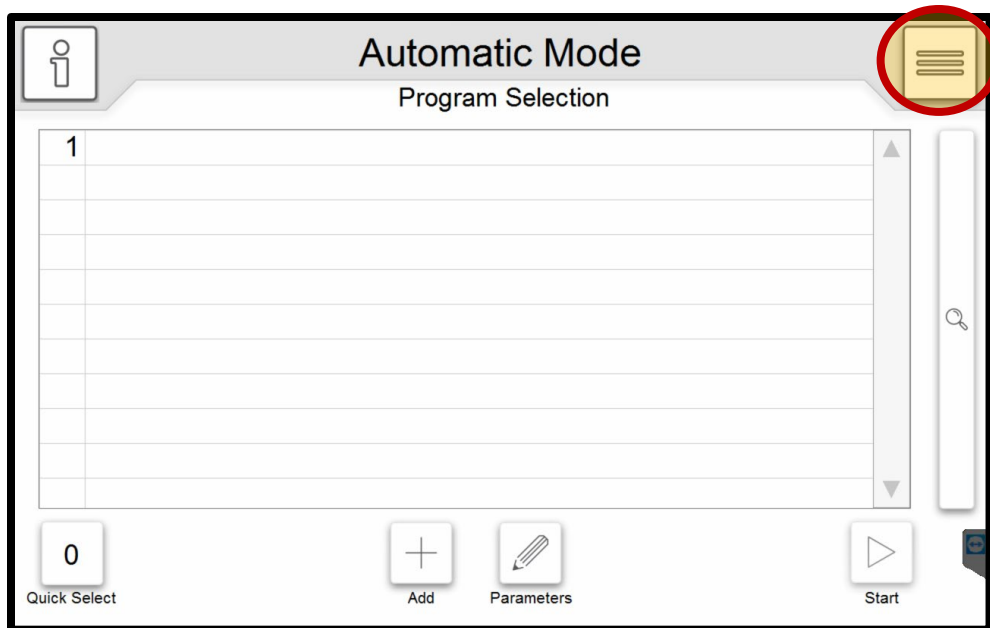

- Select  to enter settings menu

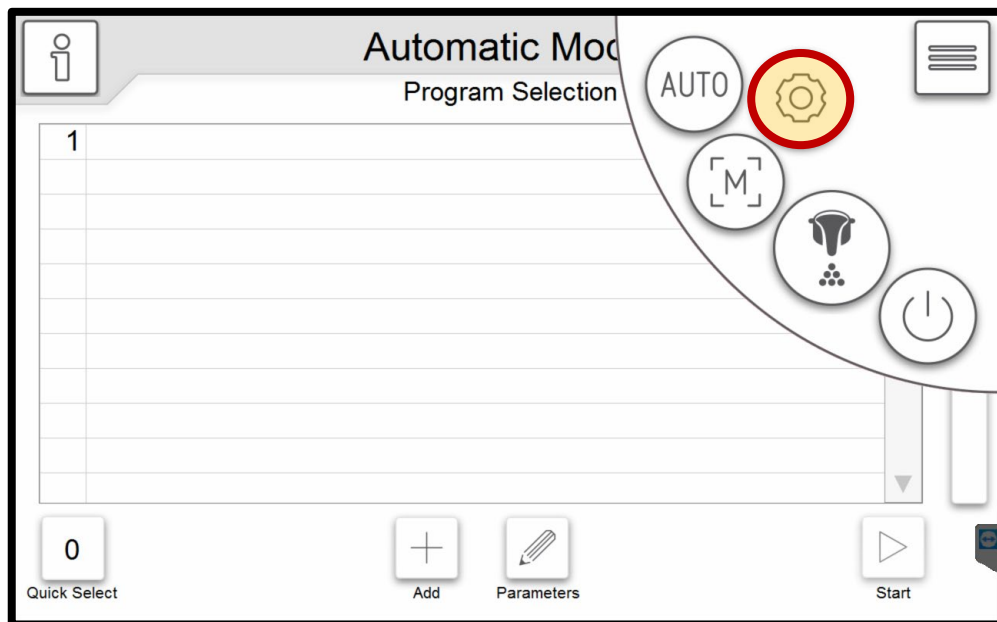


- Click ☐ Summary Report on to activate the Summary report

The screenshot shows the 'Settings Mode' interface. On the left, there is a sidebar with three tabs: 'General', 'Network', and 'Service'. The 'General' tab is selected. The main area contains various settings fields. Under the 'Printer Output' section, there is a 'File Output' box. Inside this box, the 'Summary Report' checkbox is currently unchecked. A red rectangle highlights the 'File Output' box and the 'Summary Report' checkbox.

- Once activated the check symbol will appear, confirming that reports will be created at the end of the process

This screenshot shows the same 'Settings Mode' interface as the previous one, but with the 'Summary Report' checkbox under the 'File Output' section now checked. A red rectangle highlights the 'File Output' box and the checked 'Summary Report' checkbox, indicating that the feature has been successfully activated.

- The reports can be found in the following directory
C:\data\reports

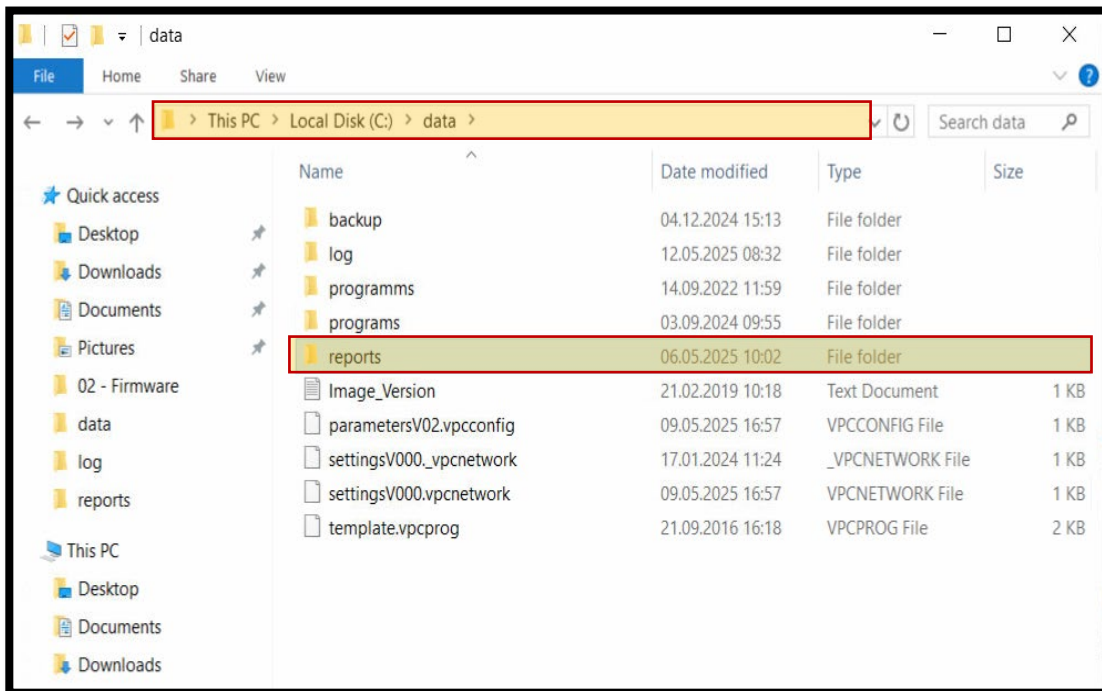

In case the problem still exists, please feel free to contact us again.

E-Mail: service@schultheiss-gmbh.de

Schultheiss GmbH